


# 1-20K SNMP card and Dry contact installation manual

1. SNMP card , Dry contact and card slot .




2. HT, HR series 1-3kVA

HT, HR series 1-3kva

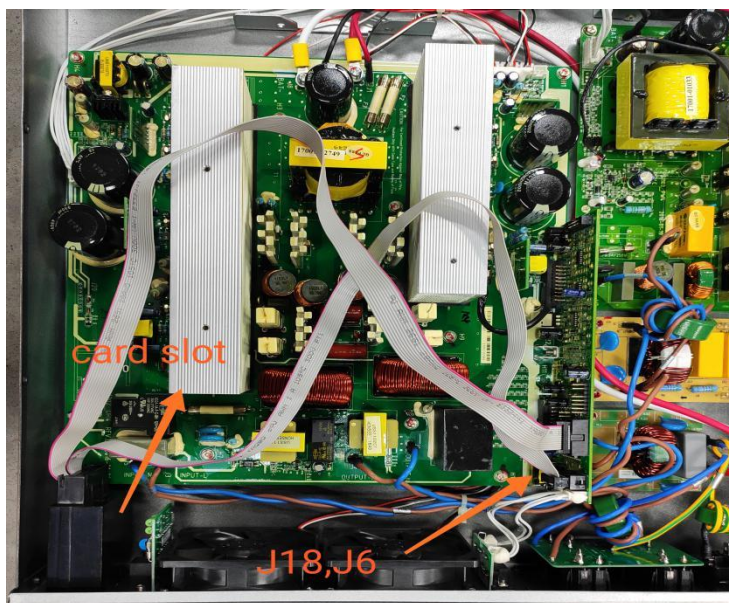


Please install SNMP card slot and connect signal cable to control board J18,J6 .

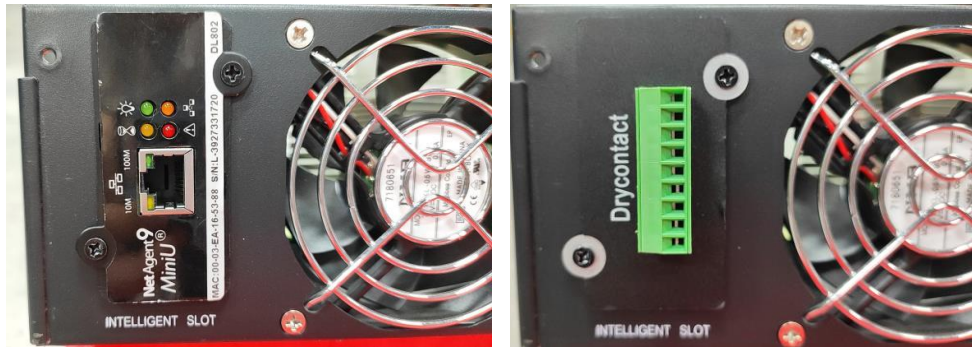


Please insert SNMP card or dry contact .

HT,HR Series 6-20kVA

HT, HR 6-20kVA

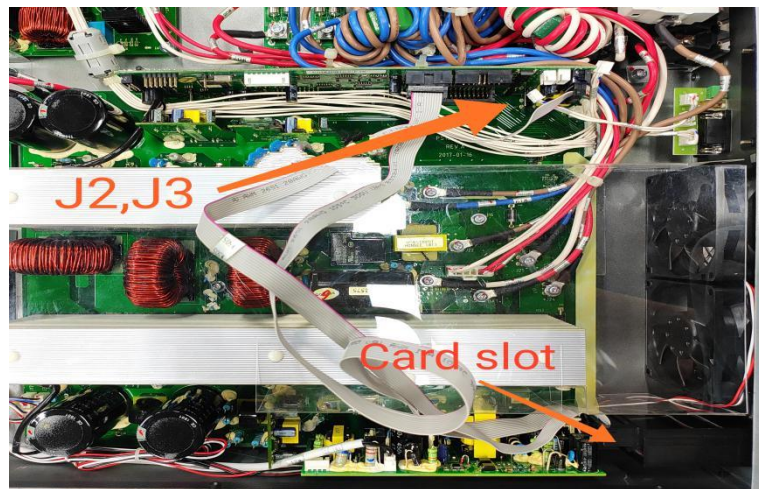

Please install SNMP card slot and connect signal cable to J2,J3 .

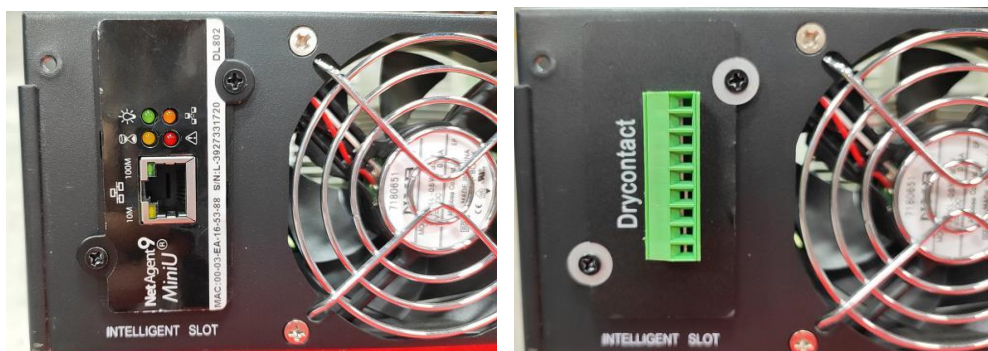

Please insert SNMP card or dry contact .